


INOVO PATIO DOOR - INSTRUCTIONS FOR CONVERTING OPERATING PANEL TO ACCEPT UPGRADED HANDLE

Tools needed: Phillips Screwdriver, Drill, 3/8" Drill Bit, 5/8" Drill Bit

1. Remove the current handle assembly if not already removed. If cork washers are present on the handle stile, remove these. If tubular plastic inserts are present inside the top and bottom holes in the stile, remove these as well.
2. Cut out the template at the right. Tape the template to the handle stile (interior or exterior), aligning the three bottom circles with the holes currently in the stile (Figure A).

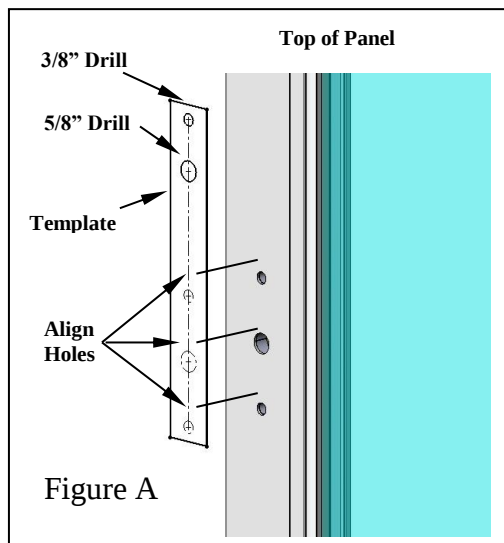

3. Mark the center locations of the top two circles on the template onto the handle stile. Remove the template.
4. Drill a 3/8" diameter hole through the stile at the top circle center location. Drill a 5/8" diameter hole through the stile at the next circle center location.
5. Install the upgraded handle assembly per the instructions provided with the handle (Figure B).

