

Sash Retainer Installation Instructions

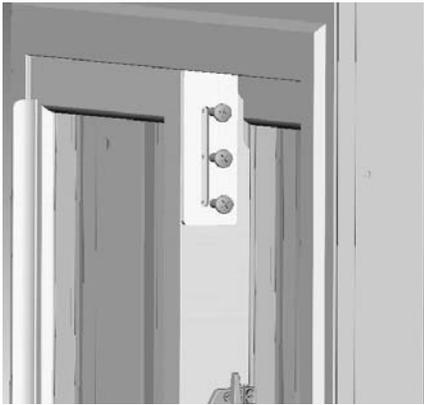


Figure A

Install the sash retainer to the active sash after the sash has been re-inserted in frame and the frame has been installed plumb, level and square in the opening with the necessary frame anchorage completed.

Attach the sash retainer through the slot to the prefabricated holes in the lock stile using the three #12 x 1 self-drilling screws supplied, Figure A. The bend of the sash retainer should slide in between the top of the lock sash and the frame; see Figure B (frame not shown for clarity.)

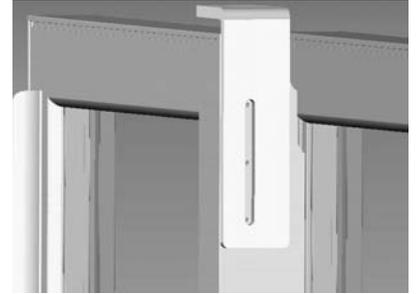


Figure B